

HINGE ADJUSTMENT INSTRUCTIONS

LATERAL MOVEMENT



WHAT IT LOOKS LIKE - THE RIGHT AND LEFT SIDE OF THE DOOR WILL NOT BE FLUSH WITH THE SIDE PANEL. 0

000

BODY


SCREW A

HOW TO FIX IT - TO MOVE THE DOOR TOWARDS OR AWAY FROM THE CENTRE OF THE UNIT, LODSEN SCREW "A". ADJUST THE DOOR AND THEN TIGHTEN SCREW "A".

DOOR

1

VERTICAL MOVEMENT




BODY DOOR SCREW C

WHAT IT LOOKS LIKE - THE TOP AND BOTTOM OF THE DOOR WILL NOT BE FLUSH WITH THE VERTICAL PANEL. HOW TO FIX IT - TO MOVE THE DOOR TOWARDS OR AWAY FROM THE HORIZONTAL PANELS, LOOSEN SCREWS "C".ADJUST THE DOOR AND THEN TIGHTEN SCREWS "C".

HORIZONTAL MOVEMENT



WHAT IT LOOKS LIKE - THE DOOR WILL APPEAR TOO FAR OR TOO CLOSE FROM THE FRONT EDGE OF THE SIDE PANEL LEAVING A GAP BEHIND THE DOOR.

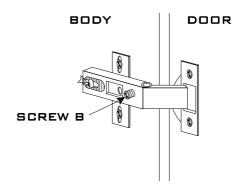

HOW TO FIX IT

- TO MOVE THE DOOR TOWARDS OR AWAY FROM THE UNIT, ADJUST SCREW "B" AND MOVE THE DOOR FORWARDS OR BACKWARDS UNTIL THERE IS AN EVEN GAP BETWEEN THE DOOR AND THE FRONT EDGE OF THE SIDE PANEL.

FURNITURE TIPPING RESTRAINT FOR AZURE CARRERA SIDEBOARD WITH WINE RACK

Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended.

When properly installed, this restraint could provide protection against the unexpected tipping of furniture due to small tremors, bumps or climbing. We recommend mounting this restraint to a wall stud.

WARNING: This product is only a deterrent. It is not a substitute for proper adult supervision.

TIPPING KIT CHECK LIST		
CODE	COMPONENT	QTY
01	PLASTIC STRAP	2
02	SCREW	8
03	NYLON WALL PLUG	4
04	PLASTIC BRACKET	4

Installation Instruction:

- 1. Attach one of the plastic brackets (04) securely near the top back edge of the furniture piece by inserting the screw (02). Refer to picture A.
- 2. Determine the final position of the furniture piece. Mark location on the wall approximately 2" below the plastic bracket (04) mounted to the back of the furniture.
- 3. Drill a starter hole into the wall stud. If wall stud is not available, drill a hole into the wall and insert nylon wall plug (03). Gently tap plug until the flange of the plug is flush with the wall.
- 4. Attach a second plastic bracket (04) by inserting and securing the screw (02) to the wall. Refer to picture B.
- 5. Align the two plastic brackets (04).
- 6. Thread the plastic strap (01) through both plastic brackets (04) and tighten until snug.
- 7. Check to make sure that the plastic brackets (04) are firmly installed the plastic strap (01) is secure.
- 8. Repeat steps 1-7 at other end of furniture piece.

